


SR-SCOPE® RMP30-S

Fischer®

Measurement
of Copper Thickness on
Printed Circuit Boards
Non-destructive, fast, accurate,
and without influence
from opposing copper layers

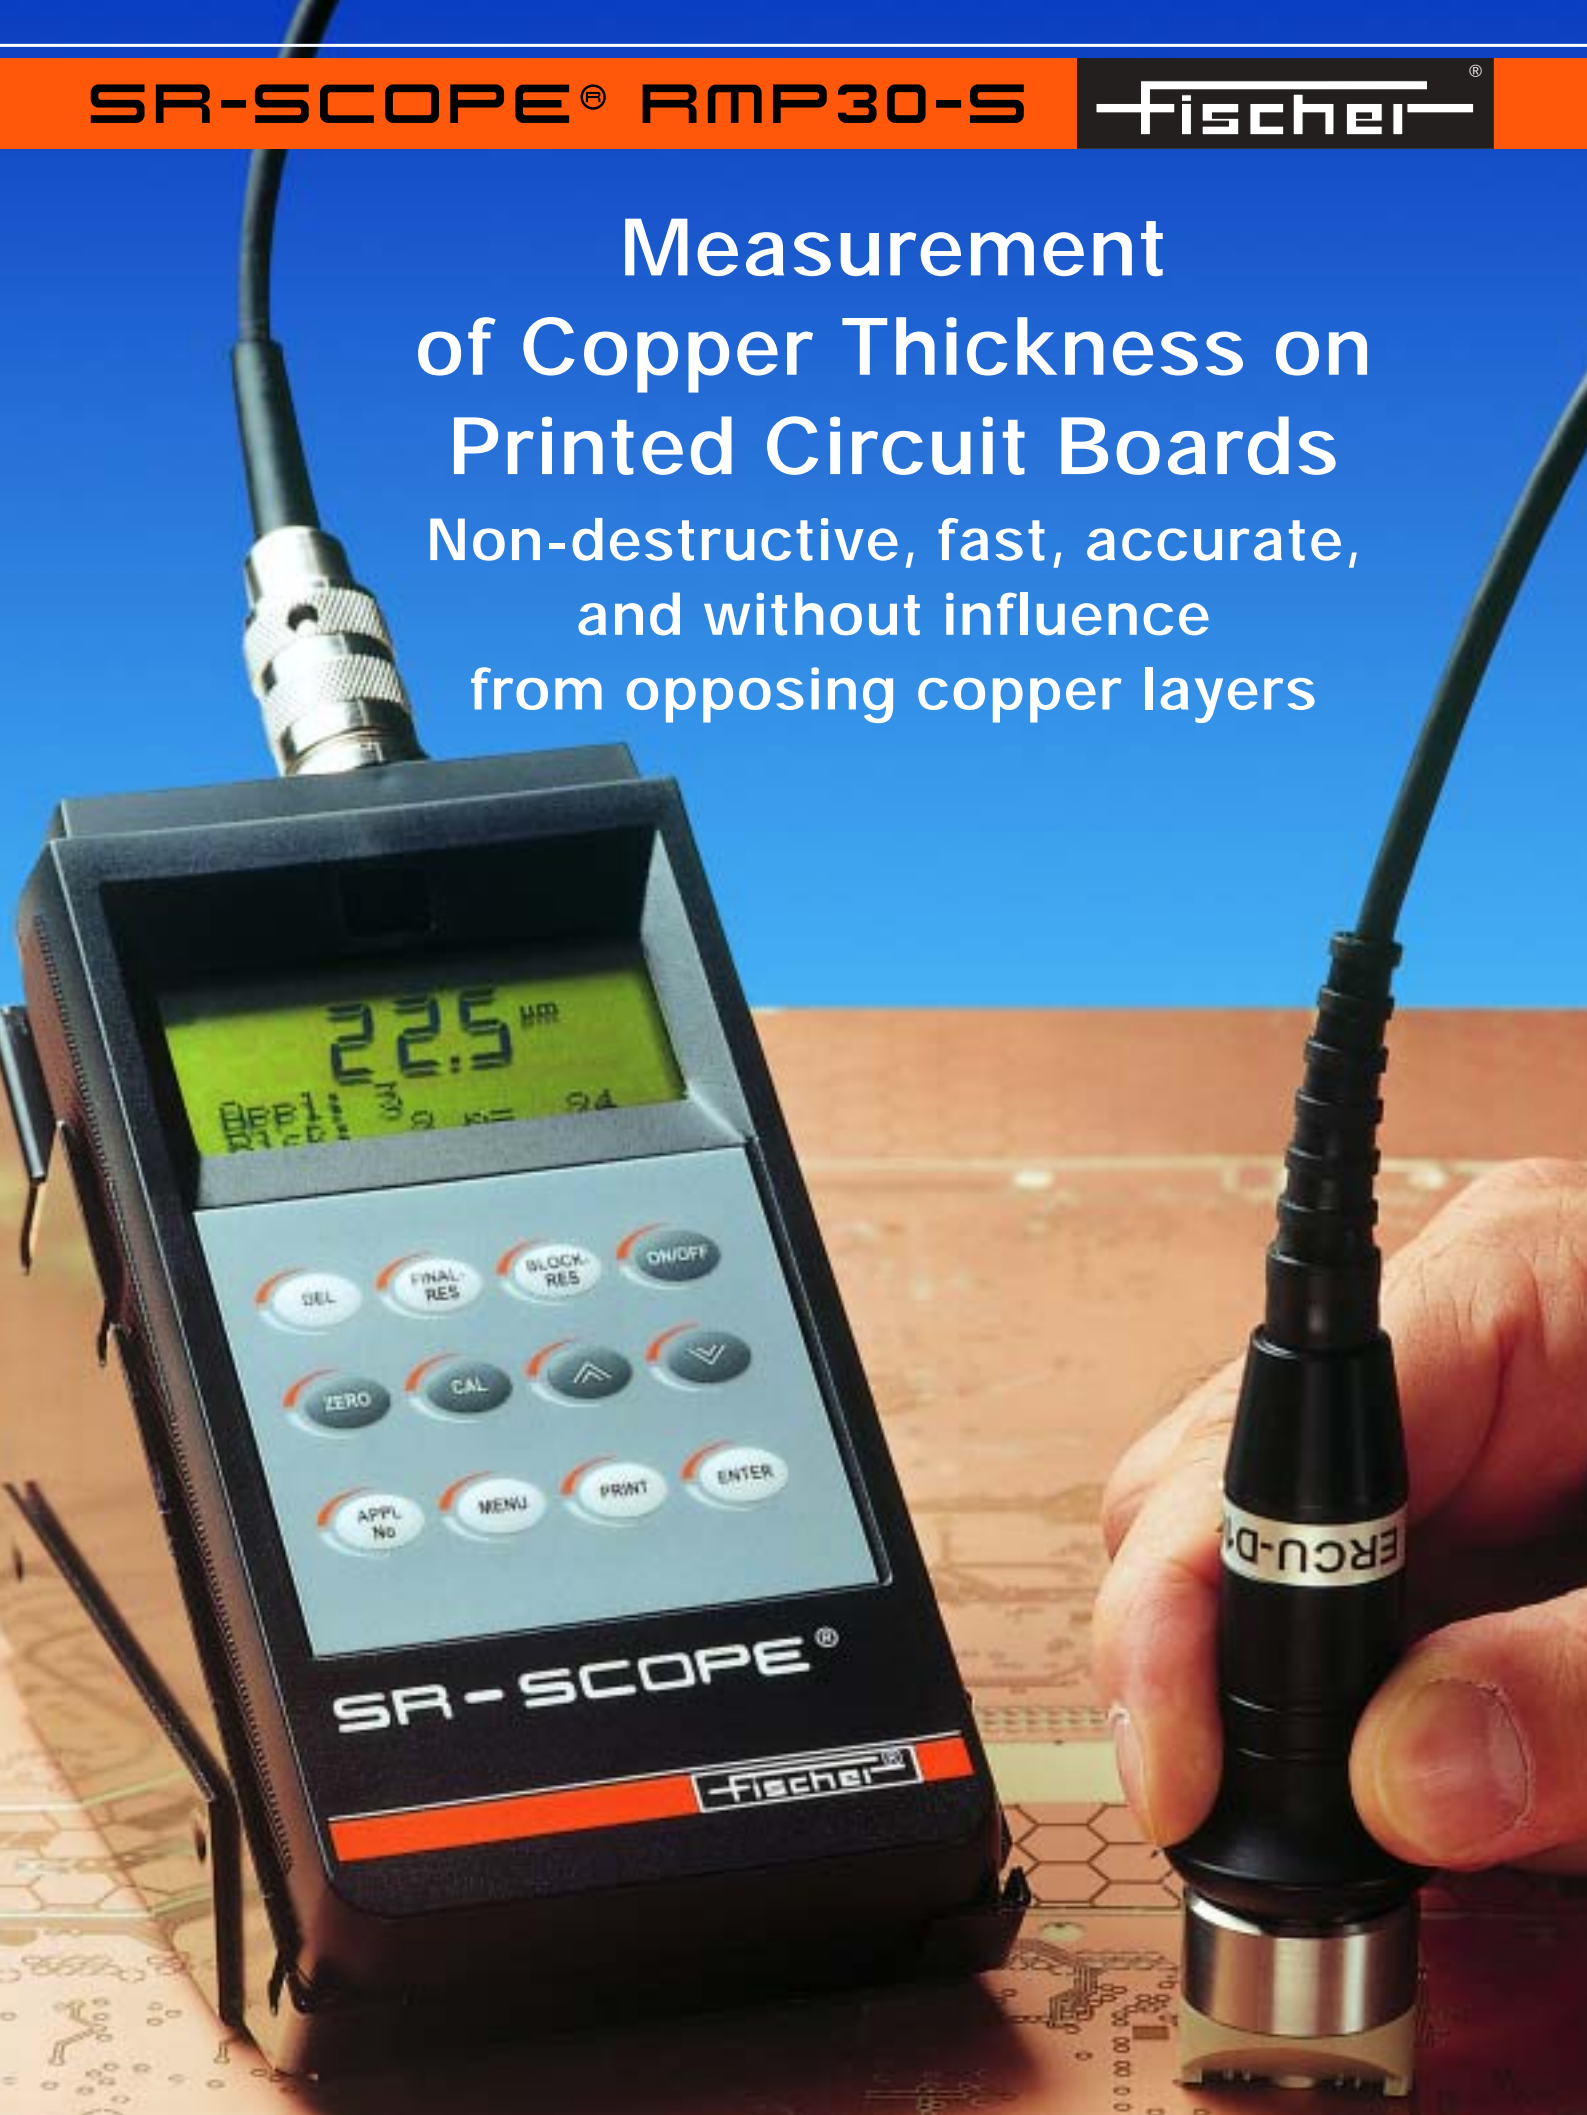


Measurement method

Electrical 4-point resistance method. A DC current is introduced into the copper coating using the two outer contact pins (figure top right). The two inner contact pins are used to tap the electrical potential generated by the current flow. This potential is converted to an equivalent copper thickness via a calibration characteristic. The measurement is not affected by isolated copper coatings opposite of one another.

Application

The SR-SCOPE[®], measures the thickness of copper coatings on the top side of pc-boards according to the final draft of standard EN 14571:2004. It is particularly well suited for measurements on multi-layers or on thin laminates, because, due to the measurement method, copper layers that are located opposite of one another do not influence each other.

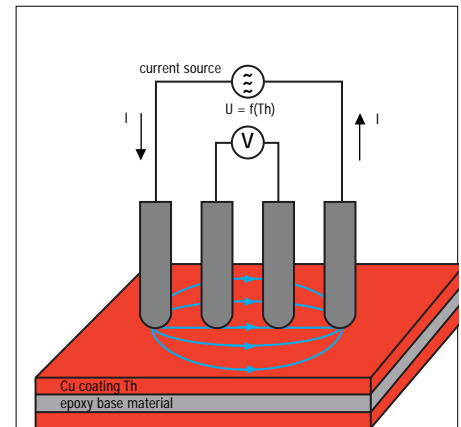

Principle of the electr. resistance method for coating thickness measurements.



Measurement probe ERCU N for small measurement areas.



Measurement probe ERCU-D10 for large measurement areas.

Features

- Hand-held instrument with large LCD display for measurements and characteristic statistical values as well as lines of text for operating information.
- Battery or line operation.
- Automatic probe recognition.
- Automatic measurement upon placement of probe.
- Specification limits.
- Acoustic signals for measurement accept and limit violation.
- Lockable keyboard.
- Automatic power off.
- Storage of a maximum of 10,000 measurements in up to 100 applications, divided into a maximum of 1,000 blocks.
- Statistical evaluation.
- Outlier monitoring.
- Calibration with certified Cu/Iso standards provides traceability of measurement results.
- Unit of measurement switchable between μm and mils.
- 8 display languages selectable.
- RS232 interface.

Technical data

Measurement range of the probes:

ERCU N

Range I: 0.1 – 10 μm (4 – 400 μm)

Range II: 5 – 120 μm (0.2 – 4.8 mils)

Repeatability precision $s^{(1)}$:

$0.75\mu\text{m}$ (30 μm) $\leq s \leq 4.5\%$ of reading

ERCU-D10

Range I: 0.1 – 10 μm (40 – 400 μm)

Range II: 5 – 200 μm (0.2 – 8 mils)

Repeatability precision $s^{(1)}$:

$0.25\mu\text{m}$ (10 μm) $\leq s \leq 1.5\%$ of reading

⁽¹⁾ dependent on range

Order information

Product	Order No.
SR-SCOPE [®] RMP30-S	603-714
PROBE ERCU N	603-220
PROBE ERCU-D10	603-387
KAL-N ERCU Cu/Iso 5 μm	603-175
KAL-N ERCU Cu/Iso 12 μm	603-176
KAL-N ERCU Cu/Iso 18 μm	603-177
KAL-N ERCU Cu/Iso 35 μm	603-178
KAL-N ERCU Cu/Iso 70 μm	603-179
KAL-N ERCU Cu/Iso 105 μm	603-180
KAL-N ERCU Cu/Iso 140 μm	603-668
MEAS. STAND V12	603-729
ERCU-SP277	
SUPPORT FOR PORTABLE INSTRUMENTS	600-025
INTERFACE	602-341
CONNECTION SET MP	
SOFTWARE PC-DATEx	602-465
SOFTWARE PC-DATACC	603-028

© Helmut Fischer GmbH+Co.KG

Subject to changes

902-070

Printed in Germany

11/04

Helmut Fischer GmbH+Co.KG
71069 Sindelfingen, Germany
Tel. (+49) 70 31 303-0
Fax (+49) 70 31 303-79
Internet: www.Helmut-Fischer.com



Fischer Instrumentation (G.B.) Ltd.
Lymington/Hampshire SO41 8JD, England
Tel. (+44) 1590-684100, Fax (+44) 1590-684110
Internet: www.fischergb.co.uk
E-Mail: mail@fischergb.co.uk



Fischer Technology, Inc.
Windsor, Ct. 06095, USA
Tel. (+1) 860 683-0781, Fax (+1) 860 688-8496
Internet: www.fischer-technology.com
E-Mail: info@fischer-technology.com



Sole Agent for Helmut Fischer GmbH+Co.KG, Germany:

Helmut Fischer Elektronik und Messtechnik AG
CH-6331 Hünenberg, Switzerland
Tel. (+41) 41 785 08 00, Fax (+41) 41 785 08 01
E-Mail: switzerland@helmutfischer.com

Branch Offices of Helmut Fischer AG, Switzerland:

Fischer Instrumentation Electronique
78180 Montigny le Bretonneux, France
Tel. (+33) (0) 1 30 58 00 58, Fax (+33) (0) 1 30 58 89 50
E-Mail: france@helmutfischer.com

Helmut Fischer S.R.L., Tecnica di Misura
20128 Milano, Italy
Tel. (+39) 02 255 26 26, Fax (+39) 02 257 00 39
E-Mail: italy@helmutfischer.com

Fischer Instruments, S.A.
08018 Barcelona, Spain
Tel. (+34) 93 309 79 16, Fax (+34) 93 485 05 94
E-Mail: spain@helmutfischer.com

Helmut Fischer Meettechnik B.V.
5627 GB Eindhoven, The Netherlands
Tel. (+31) 40 248 22 55, Fax (+31) 40 242 88 85
E-Mail: netherlands@helmutfischer.com

Fischer Instruments K.K.
Saitama-ken 340-0012, Japan
Tel. (+81) 48 929 3455, Fax (+81) 48 929 3451
E-Mail: japan@helmutfischer.com

Fischer Instrumentation (Far East) Ltd.
Kwai Chung, N.T., Hong Kong
Tel. (+852) 24 20 11 00, Fax (+852) 24 87 02 18
E-Mail: hongkong@helmutfischer.com

Fischer Instrumentation (S) Pte Ltd.
Singapore 118529, Singapore
Tel. (+65) 62 76 67 76, Fax (+65) 62 76 76 67
E-Mail: singapore@helmutfischer.com

Nantong Fischer Instrumentation Ltd.
Shanghai 200437, P.R.C., China
Tel. (+86) 21 6555 7455, Fax (+86) 21 6555 2441
E-Mail: china@helmutfischer.com

